






INSTALLATION INSTRUCTIONS BLITZDUCTORconnect BCO ML2...


2046 / 04.23 / 3018407




DE Einbauanleitung
GB Installation instructions
IT Istruzioni di montaggio
FR Instructions de montage
NL Montagehandleiding
ES Instrucciones de montaje
PT Instruções de montagem
DK Monteringsvejledning
SE Monteringsanvisning
FI Asennusohje
GR Οδηγίες συναρμολόγησης
PL Instrukcja montażu
CZ Montážní návod
TR Kurulum Talimatları
RU Инструкция по монтажу
CN 安装说明
HU Szerelési útmutató
JP 設置説明書

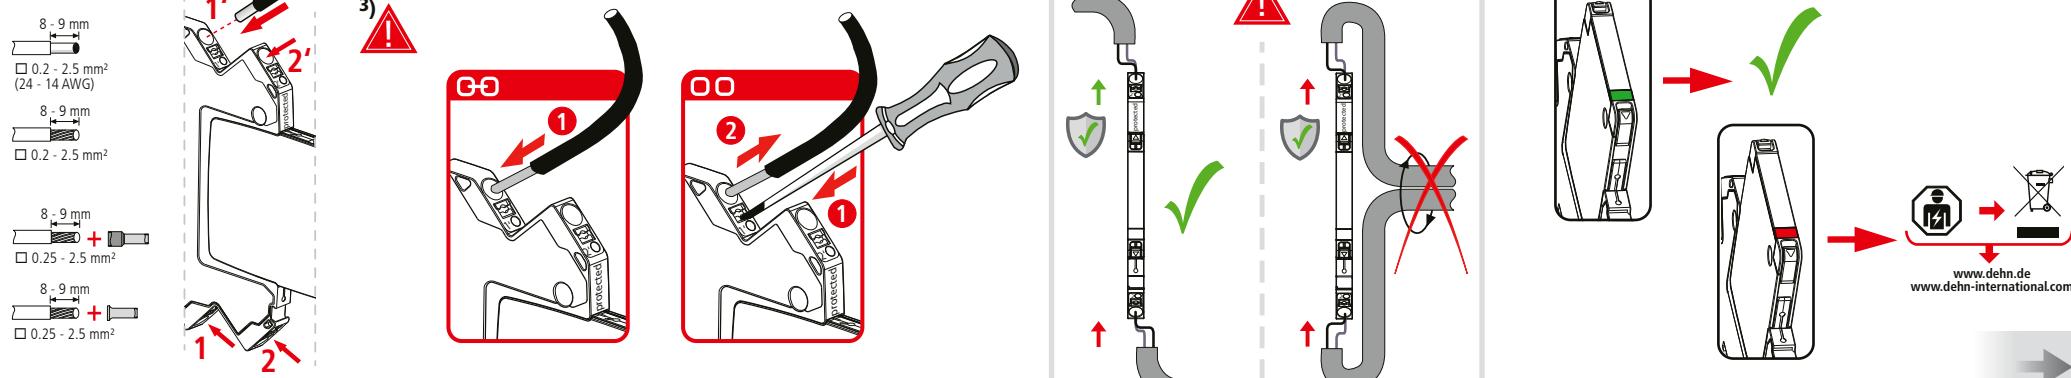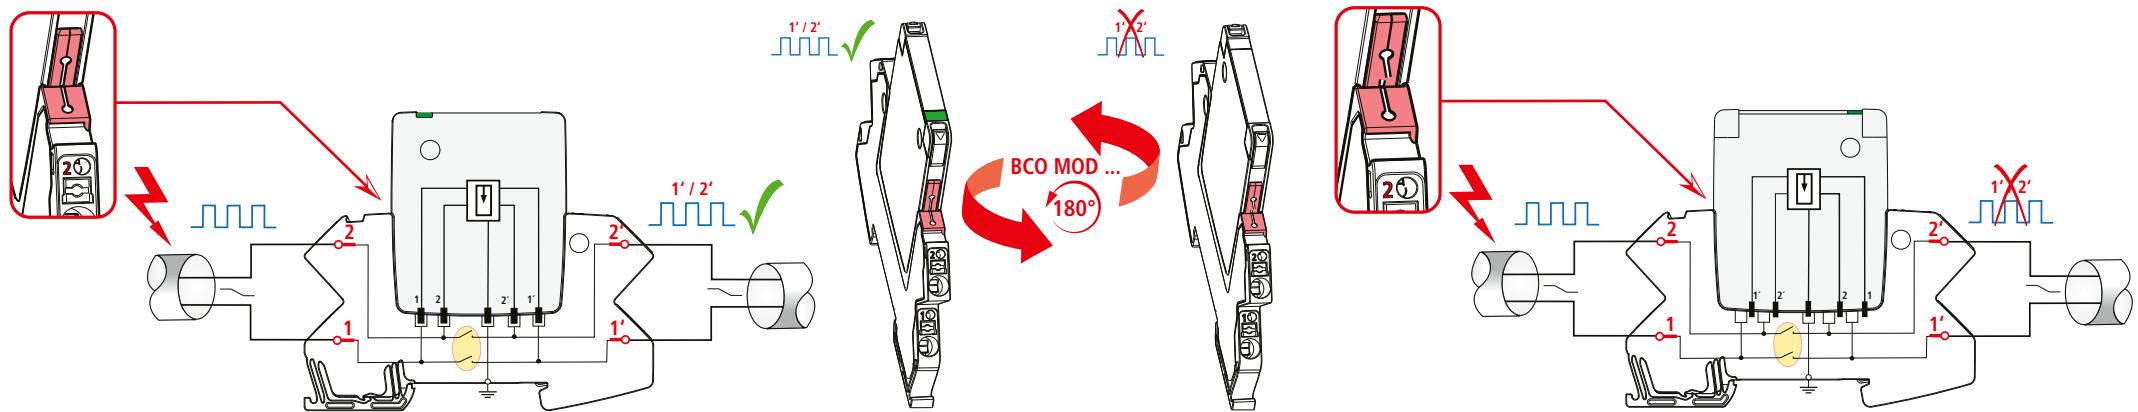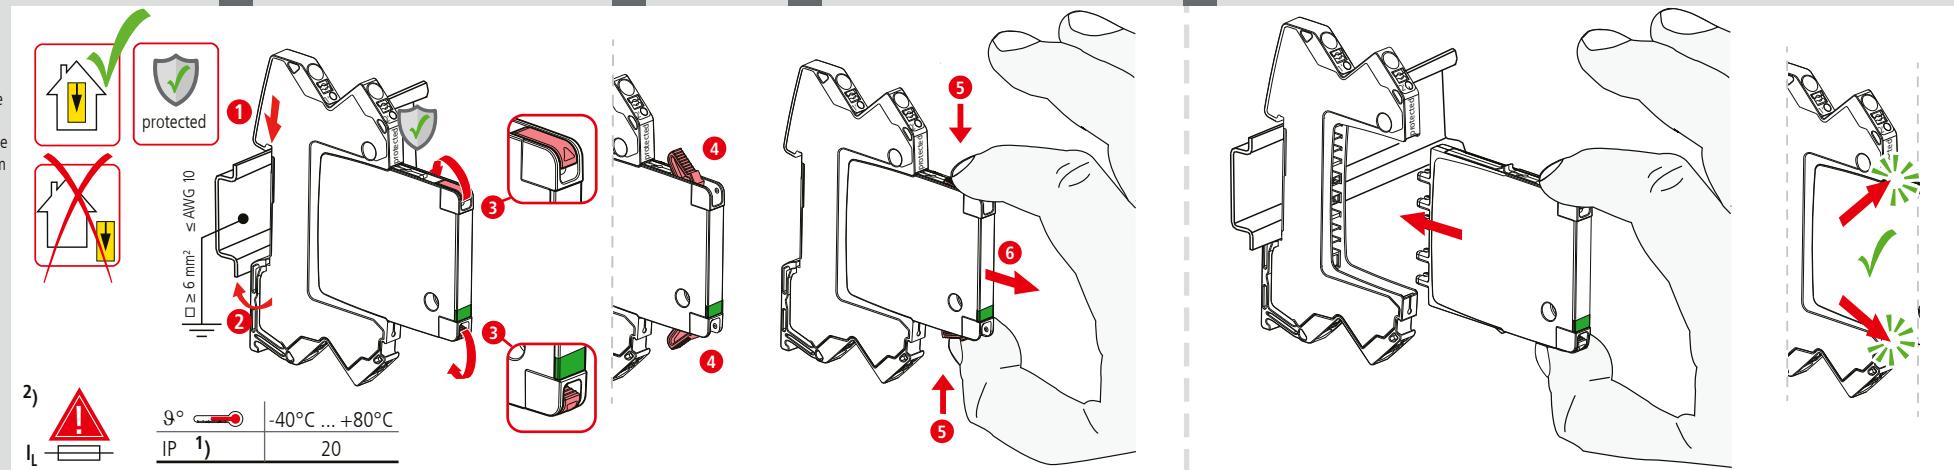


BLITZDUCTORconnect BCO ML2 ...

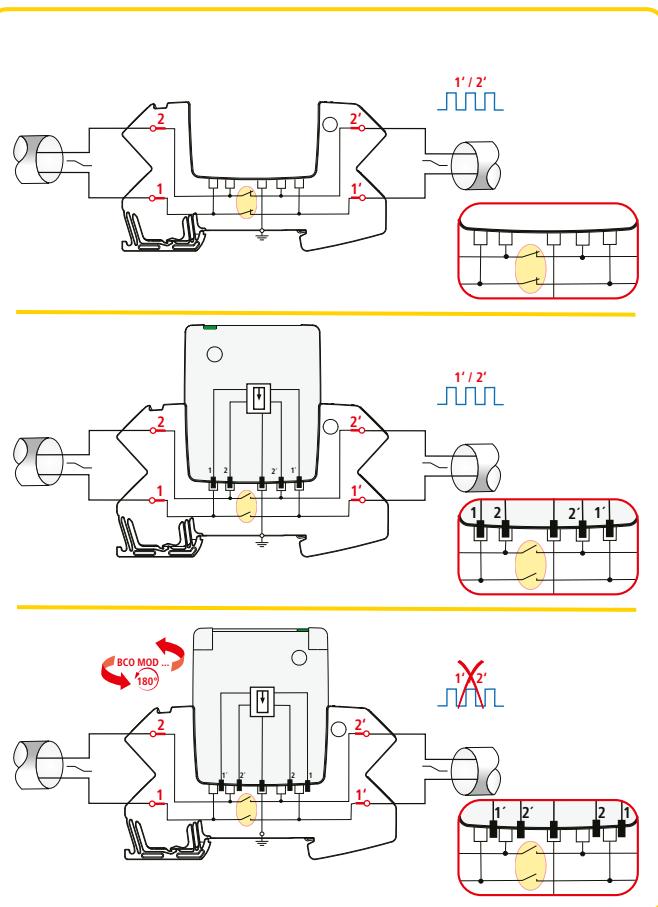


BCO ML2 BD XXX 927 2XX / 927 0XX

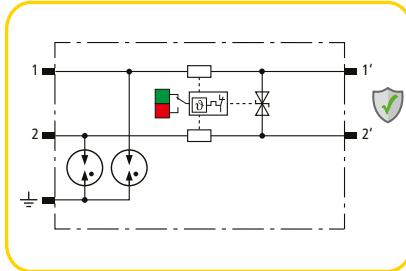


BCO ML2 BE XXX 927 2XX / 927 0XX

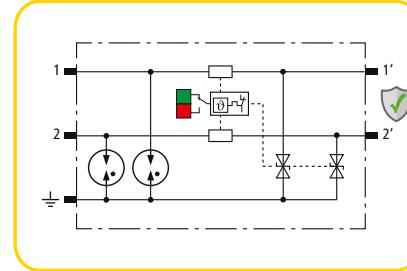


BCO ML2 BD HF XXX 927 2XX / 927 0XX

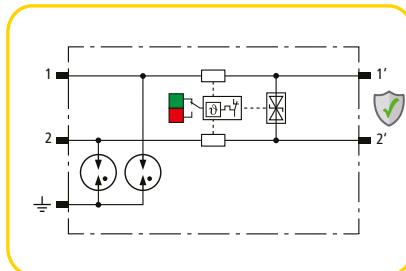


BCO ML2 BE HF XXX 927 2XX / 927 0XX

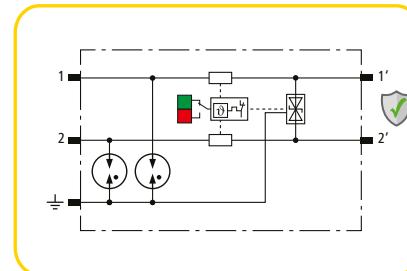

BCO ML2 MVG 230 927 290 / 927 090

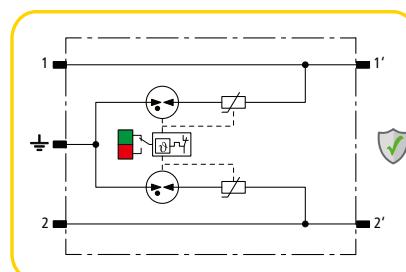

BCO ML2 B 180 927 210 / 927 010

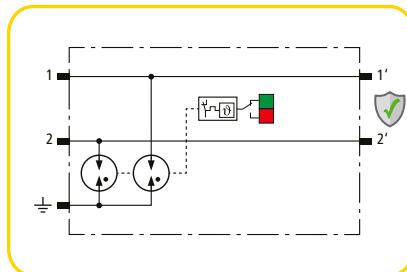

BCO ML2 BPD 24 927 214 / 927 014

