



W-FIT55E	Rocker for wireless pushbutton E-Design55	
	-am anthacite mat	Art. No. 30055910
	-pg polar white glossy	Art. No. 30055911
	-pm polar white mat	Art. No. 30055912
	-wg pure white glossy	Art. No. 30055913



W-F2T55E	Rocker for wireless pushbutton and wireless pushbutton with battery in E-Design55	
	-am anthacite mat	Art. No. 30055914
	-pg polar white glossy	Art. No. 30055915
	-pm polar white mat	Art. No. 30055916
	-wg pure white glossy	Art. No. 30055917



W-F2T55E/10	10x Rocker for wireless pushbutton and wireless pushbutton with battery in E-Design55	
	-am anthacite mat	Art. No. 30055971
	-pg polar white glossy	Art. No. 30055972
	-pm polar white mat	Art. No. 30055973
	-wg pure white glossy	Art. No. 30055970



W-B4T55E	Rocker for bus pushbutton in E-Design55	
	-am anthacite mat	Art. No. 30055918
	-pg polar white glossy	Art. No. 30055919
	-pm polar white mat	Art. No. 30055920
	-wg pure white glossy	Art. No. 30055921



DW-F4T55E	Double rocker for wireless pushbutton and wireless pushbutton with battery in E-Design55	
	-am anthacite mat	Art. No. 30055922
	-pg polar white glossy	Art. No. 30055923
	-pm polar white mat	Art. No. 30055924
	-wg pure white glossy	Art. No. 30055925



DW-F4T55E/10	10x Double rocker for wireless pushbutton and wireless pushbutton with battery in E-Design55	
	-am anthacite mat	Art. No. 30055956
	-pg polar white glossy	Art. No. 30055958
	-pm polar white mat	Art. No. 30055959
	-wg pure white glossy	Art. No. 30055957



DW-B4T55E	Double rocker for bus pushbutton in E-Design55	
	-am anthacite mat	Art. No. 30055926
	-pg polar white glossy	Art. No. 30055927
	-pm polar white mat	Art. No. 30055928
	-wg pure white glossy	Art. No. 30055929

ROCKERS AND DOUBLE ROCKERS E-DESIGN55 UNENGRAVED



W-WT55E	Rocker for rocker pushbutton and rocker switch in E-Design55	
	-am anthracite mat	Art. No. 30055930
	-pg polar white glossy	Art. No. 30055931
	-pm polar white mat	Art. No. 30055932
	-wg pure white glossy	Art. No. 30055933



DW-W2T55E	Double rocker for rocker pushbutton in E-Design55	
	-am anthracite mat	Art. No. 30055934
	-pg polar white glossy	Art. No. 30055935
	-pm polar white mat	Art. No. 30055936
	-wg pure white glossy	Art. No. 30055937

ROCKERS AND DOUBLE ROCKERS E-DESIGN55 LASER ENGRAVED

Please always also indicate the engraving number according to the following list of pictograms

For any laser engraving order, please specify the type of your pushbutton, remote control or handheld transmitter, the engraving number and also if you need a single or double rocker. Rockers and double rockers for pushbuttons are available on pages 5-45 to 5-46.

The additional title +2P will do for each arrow top (up) and bottom (down).

The additional title +IO will do for I (=on) top and O (=off) down.

The additional title +OI will do for O (=off) top and I (=on) down.

Rockers and double rockers in E-Design55 are available in the colors -am (anthracite mat), -pg (polar white glossy), -pm (polar white mat) and -wg (pure white glossy).



LGI	Laser engraving individually, create new pictogram	Art. No. 30000980
------------	--	--------------------------



W-FIT55E	Rocker for wireless pushbutton E-Design55, -am/-pg/-pm/-wg	Art. No. 30055949
-----------------	--	--------------------------



W-F2T55E	Rocker for wireless pushbutton and wireless pushbutton with battery in E-Design55, -am/-pg/-pm/-wg	Art. No. 30055966
-----------------	--	--------------------------



W-F2T55E-am+2P	Rocker for wireless pushbutton and wireless pushbutton with battery in E-Design55, arrow top (up) and bottom (down), am	Art. No. 30055969
-----------------------	---	--------------------------



W-F2T55E-wg+2P	Rocker for wireless pushbutton and wireless pushbutton with battery in E-Design55, arrow top (up) and bottom (down), wg	Art. No. 30055967
-----------------------	---	--------------------------



DW-F4T55E	Double rocker for wireless pushbutton and wireless pushbutton with battery in E-Design55, -am/-pg/-pm/-wg	Art. No. 30055952
------------------	---	--------------------------



DW-F4T55E-am+2P	Double rocker for wireless pushbutton and wireless pushbutton with battery in E-Design55, arrow top (up) and bottom (down), am	Art. No. 30055955
------------------------	--	--------------------------



DW-F4T55E-wg+2P	Double rocker for wireless pushbutton and wireless pushbutton with battery in E-Design55, arrow top (up) and bottom (down), wg	Art. No. 30055954
------------------------	--	--------------------------