

I

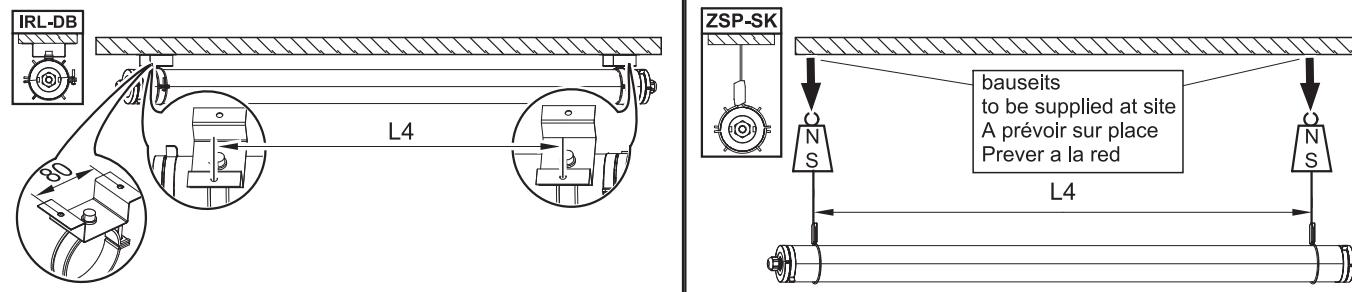
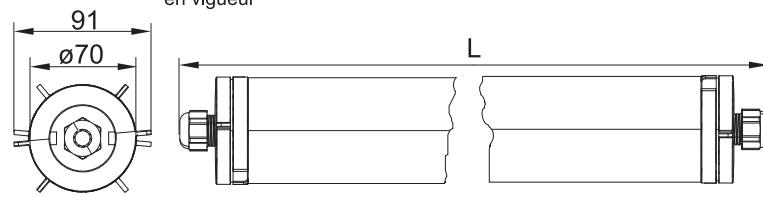
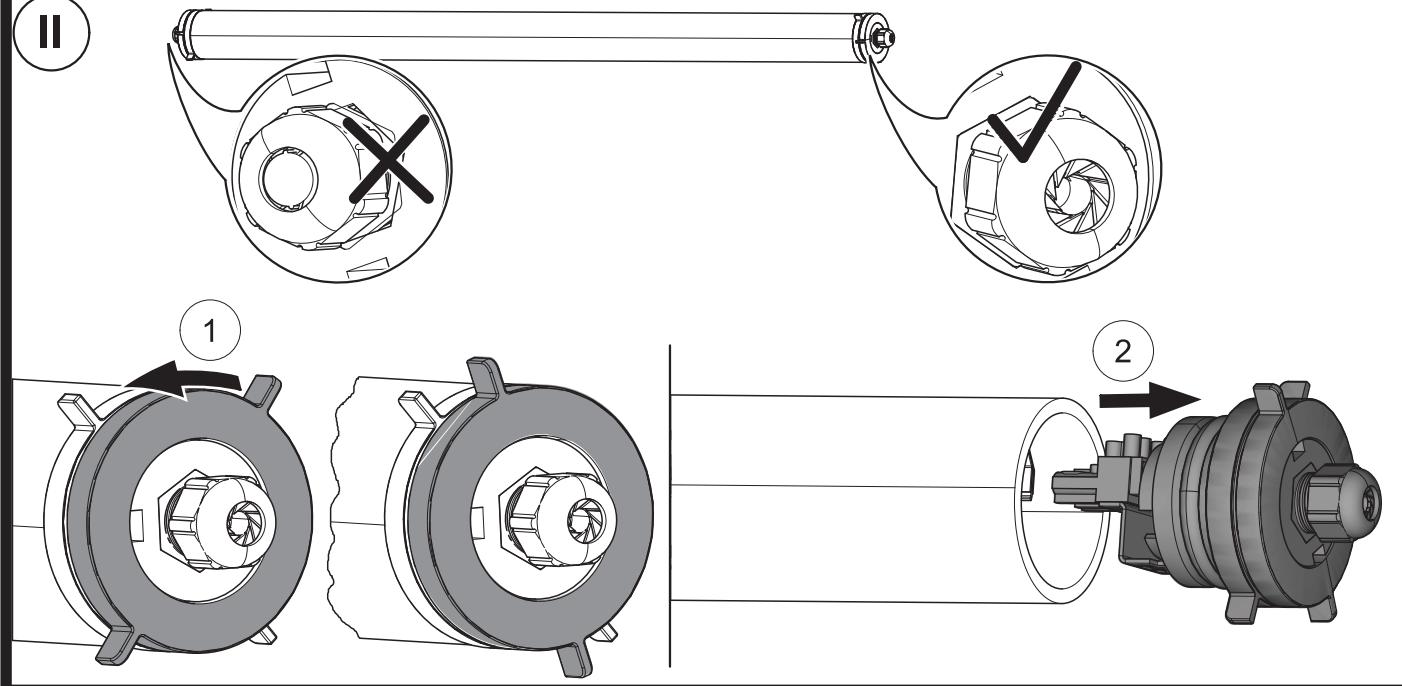
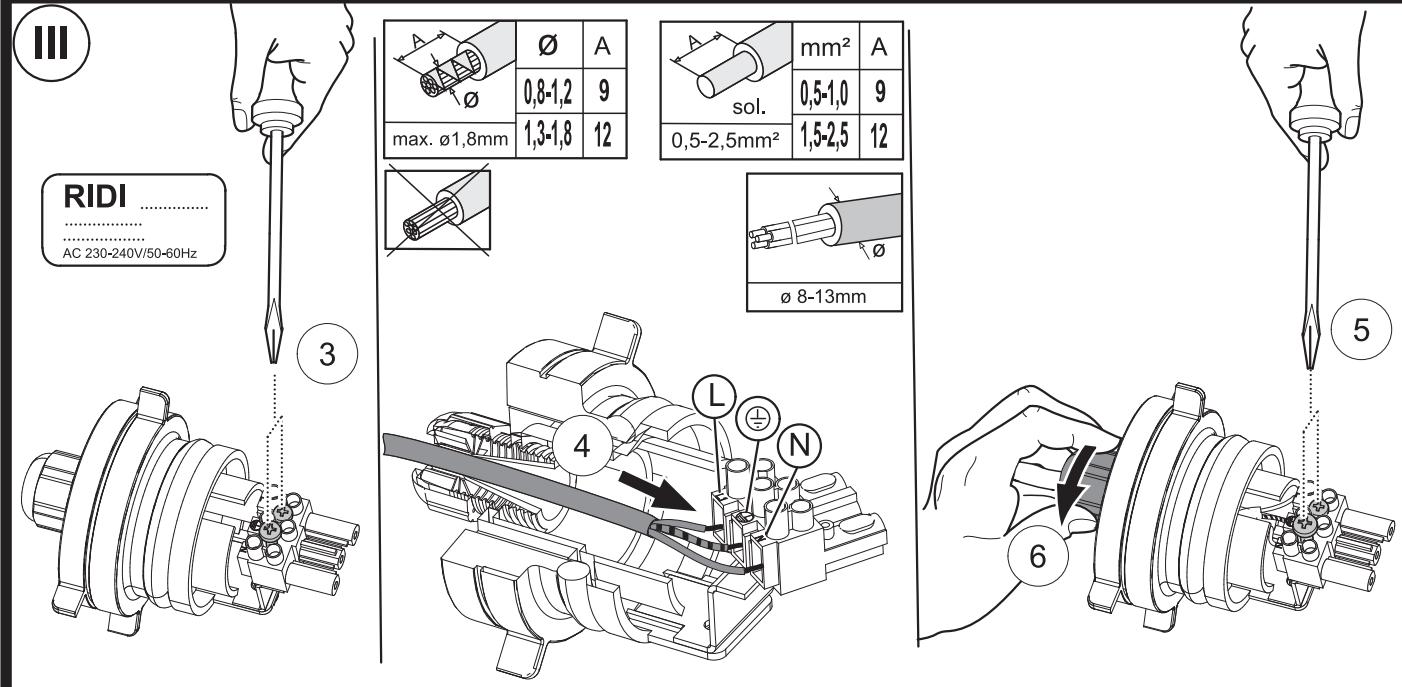
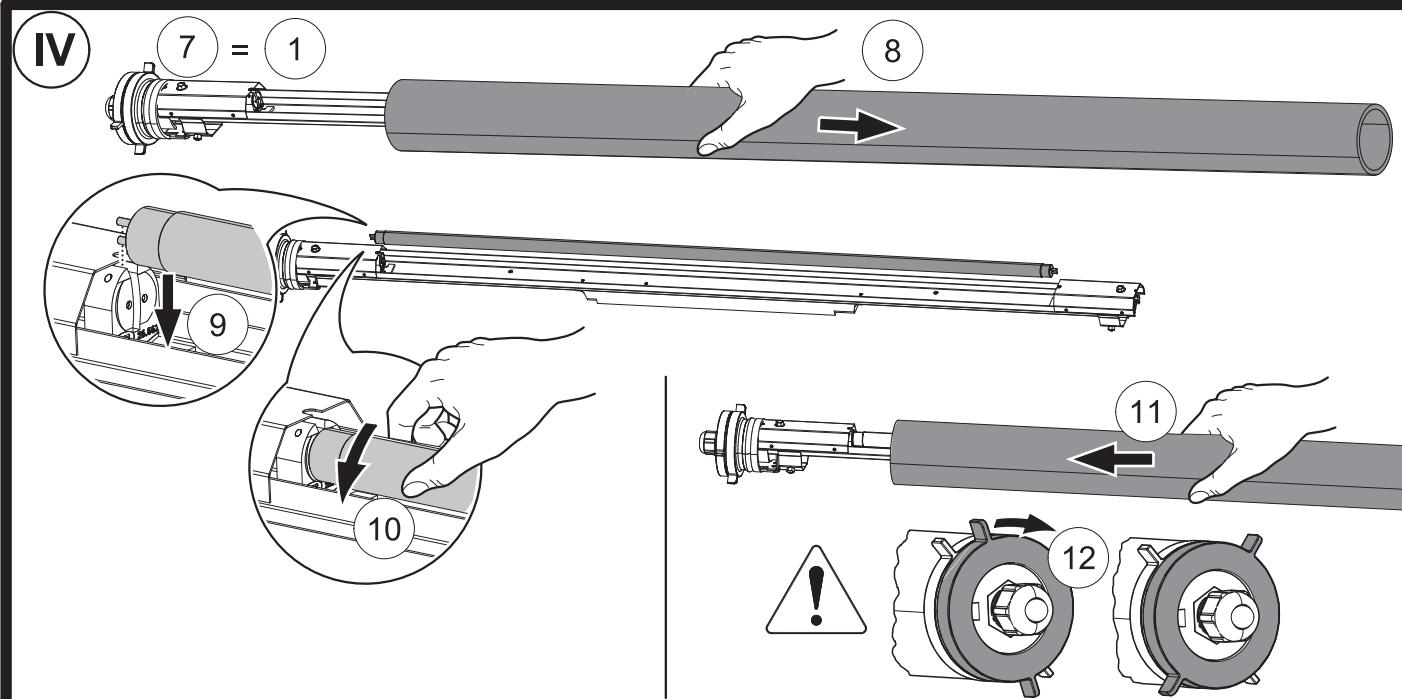
D Für die Installation und
für den Betrieb der Leuchten
sind die nationalen Sicherheits-
vorschriften zu beachten.

GB Please note national safety
instructions for installation
and operation of this luminaire.

F 'Pour l'installation et le
fonctionnement des luminaires
il est impératif de respecter
les normes nationales de sécurité
en vigueur'

PL W celu prawidłowej instalacji
i poprawnego działania oprawy
należy przestrzegać krajowych
przepisów bezpieczeństwa.

IRL-T16 135/49/80 W	1790	125	1600
IRL-T16 128/54 W	1490	110	1300
IRL-T16 121/39 W	1190	95	1000
IRL-T16 114/24 W	890	80	700
Typ	L	N S	L4

**II****III****IV**

RIDI

IRL-T16
Montageanleitung



RIDI Leuchten GmbH
Hauptstrasse 31 - 33
D-72417 Jungingen
Tel.: 07177/872-0
Fax.: 07177/872-48
eMail: info@ridi.de
Internet: www.ridi.de

MON6057

24/13

