




## **QuickFit** Schutzkorb

### Montageanleitung

## **QuickFit** protection basket

### Mounting instructions

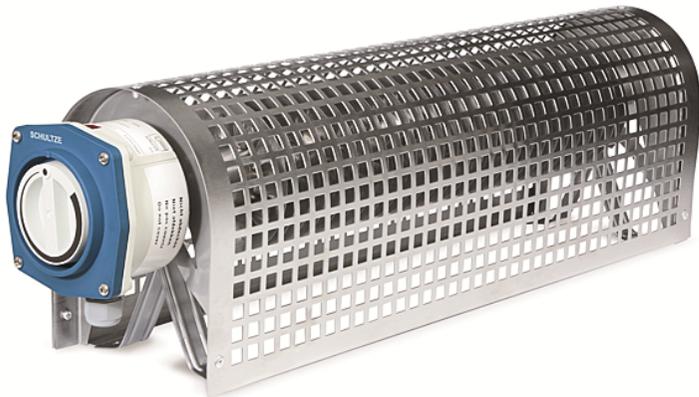

### Deutsch

Den *QuickFit* Schutzkorb montieren Sie ohne Werkzeug. In wenigen Minuten sitzt der Schutzkorb fest auf Ihrem Rippenrohrheizofen. Die BefestigungsfüÙe des Rippenrohrheizofens sollten sich etwa mittig auf dem unberippten Rohr befinden.

Biegen Sie nun alle vier Laschen an den Kopfteilen des Schutzkorbes um ca. 90° nach innen. Dann setzen Sie den Schutzkorb auf den Rippenrohrheizofen und biegen die Laschen soweit zurück, bis ein fester Sitz gegeben ist.

### English

The *QuickFit* protection basket is mounted without any tools and will be fixed on your finned tube heater within a few minutes. The mounting feet of the heater should be approx. in the middle of the tube on each side.

Now, bend all four clips of the protection basket for approx. 90° inwards. Then put on the protection basket and bend back the four clips until it fits tight.



**Friedrich Schultze GmbH**

Am Birlenbach 15    Tel. +49 (0) 271 890 46 -0    info@schultze-riro.de  
D-57078 Siegen    Fax +49 (0) 271 890 46 -13    www.schultze-riro.de